



← Air Flow

KEY
 L = Live
 N = Neutral
 E = Earth
 Lo=Low Fan
 Hi=Hi Fan
 VR = Valve

Lo Hi VR
 Fan Lo Contact Max 5A
 Fan Hi Contact Max 5A
 Valve Contact Max 5A
 2A FUSE

Comp
 Compressor Contact Max 15 A

ISOLATOR
 N L

220V

220/110V TRANSFORMER
 12V

TRANSFORMERS
 AC220V
 AC12V

Display Panel

Green	Yellow	Button	IR
Comp Run	Pwr ON	Auto	

← Air Flow OUT

← Air Flow IN

C
 2
 0
 0
 F
 C